AdView™

Dynamic Messenger

User's Manual
DM8i, DM10i
Interactive
Dynamic Messenger

CONTENTS

1. Introductions 3
1.1 8"i Dynamic Messenger 3
1.2 10"i Dynamic Messenger 3

2. Warnings and Suggestions 3
2.1 Safety Precautions 3
2.2 Troubleshooting 3
2.3 Warranty 3

3. Installation 4
3.1 Remove CF Cover 4
3.2 Counter Stand 4
3.3 Wall Mount 4

4. Operation Guide 5
4.1 Remote Control 5
4.2 Remote Control Button Functions 5
4.3 Audio Output 6
4.4 Interactive 6

5. Media Guide 7
5.1 Parameter Settings 7

6. Menu Setup 8
6.1 Video Adjust 8
6.2 Menu Adjust 8
6.3 Exit 8

7. Specifications 9

Parts Inventory Check List

1. Multimedia Digital Photo Frame
2. Remote Control
3. DC12V/2.5A power supply
5. Counter Stand (**Includes 8-installation screws)**
6. 4 - Standoffs
7. Audio Cable (5.0ft)

1. Introductions

This user's manual covers operational instructions and technical specifications for 8" and 10" Adview Interactive Dynamic Messengers with built-in compact flash card player.
Please read it carefully prior to turning on the unit.

1.1 8-inch Interactive Dynamic Messenger

Frame: 9"h X 12"w high impact plastic.
Built-in compact flash card player.
Audio output connection.

1.2 10-inch Interactive Dynamic Messenger

Frame: 9"h X 12"w high impact plastic.
Built-in compact flash card player.
Audio output connection.

2. Warnings and Suggestions

Warning:
Please power off the unit before inserting or withdrawing CF card. Otherwise, the card or the unit could be damaged.

2.1 Safety precautions

1. Handle unit with care. Place LCD screen on a soft cloth or surface before installation of counter stand to prevent scratches or damage.
2. Turn off power before cleaning panel, use a soft cloth only.
3. Never block venting in order to prevent overheating.
4. Never disassemble or perform self-maintenance and repair. Opening or removing cover plate may result in a high-voltage electric shock hazard. Have a qualified technician perform all product maintenance. Warranty will be void if the unit is disassembled.
5. Do not allow unit to come into contact with liquids.
6. Use only approved DC12V/2.5A power adapter with unit.

2.2 Troubleshooting

1. Will not switch on:
   Please ensure the power adapter is connected to unit and plugged into working outlet.
2. If interactive buttons will not work properly, make sure file names are given per instruction manual.
3. If some interactive buttons do not work make sure you have eleven files on compact flash card.
4. If movie is playing, but no sound, please turn up the volume.
5. Can not read files after compact flash card is inserted.
   Check the insertion direction. It should never take excessive force to insert card into player.
   Make sure the file types are supported by the unit.
6. Blue screen
   Please unplug and reseat power adapter into port.

2.3 Warranty

Our warranty does not cover the following:
1. Removed or altered serial number label
2. Damage as a result of natural disasters
   Disasters such as floods, fires, winds, earthquakes or lightening
3. Misuse or abuse, any modification or alternation
   Improper installation or maintenance
   Used with an unauthorized accessory

3. Installation

3.1 Remove Compact flash Cover

The DM8/10i will come with a metal cover over the CF port. This cover will need to be removed with a small phillips screw driver before CF card insertion. Once card is inserted metal cover can be reinstalled to keep card from easily being stolen or changed.

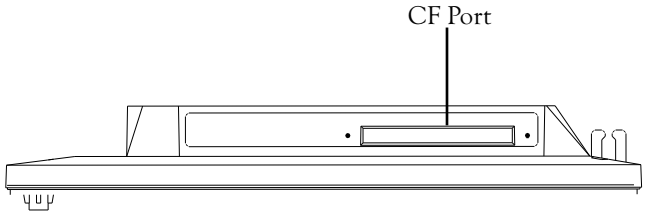

3.2 Counter Stand

DM8/10i - Includes stand with base. Attach stand to DM8/10i using 4 mounting screws. Attach base to stand using 4 remaining mounting screws.

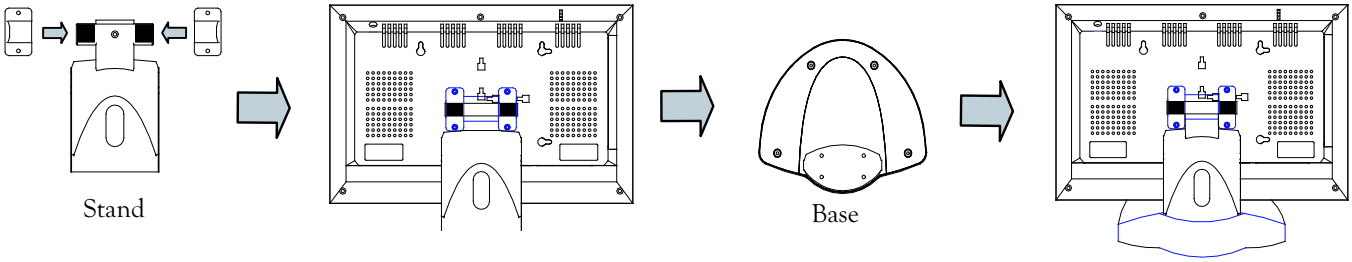

3.3 Wall Mount - DM8/10i can be wall mounted in either landscape or portrait orientation. (Wall mounting screws are not included).

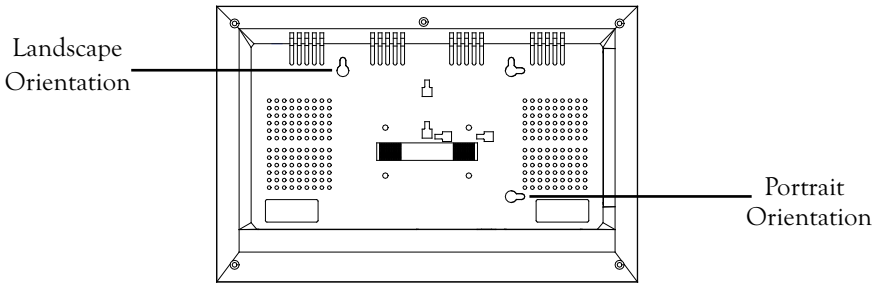

4. Operation Guide

4.1 Remote Control - Before use, please remove plastic battery saver sheet from end of remote. The remote control for interactive units has very limited functionality. To power DM8/10i On/Off, plug or unplug adapter cord, as Power key on remote does not function.

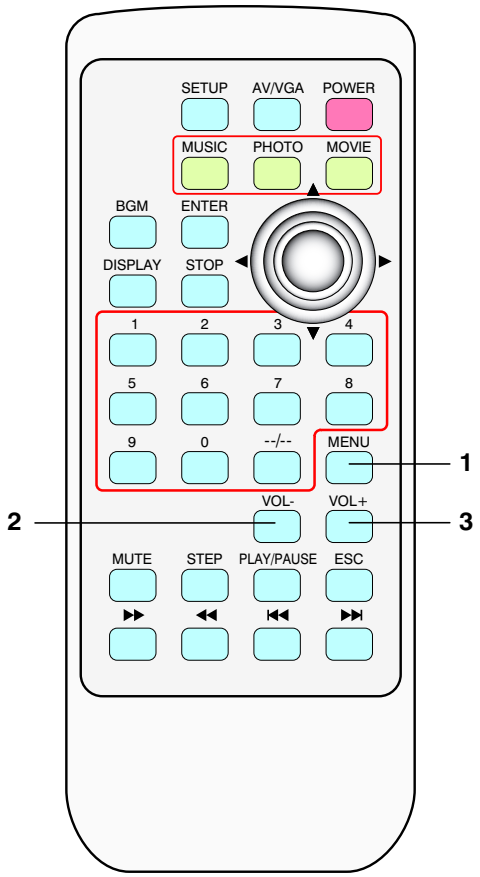

4.2 Remote Control Button Functions

KEY	KEY FUNCTION
1. MENU	Menu setup options (Use VOL- or VOL+ to make adjustments to settings)
2. VOL-	Reduce volume (Normal Operation), decrease setting (Menu is activated)
3. VOL+	Increase volume (Normal Operation), increase setting (Menu is activated)

4.3 Audio Output

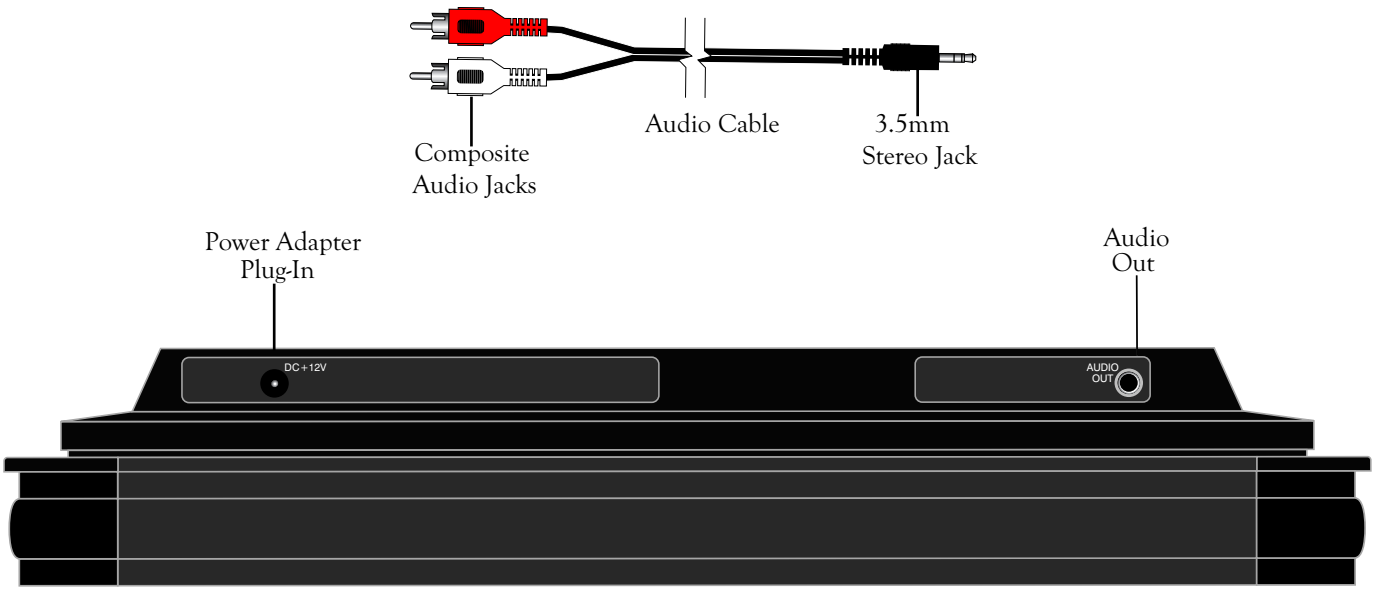

Audio Output - DM8/10i can output to any player with composite audio inputs, use Audio Cable (Included). Plug white and red composite jacks into player audio inputs. On DM8/10i plug 3.5mm stereo jack into Audio Out. No sound will emit from DM8/10i when stereo jack is plugged in.

4.4 Interactive

File Setup - DM8/10i will function only when, MPEG 1 or 2 file formats are used (See section 5). Eleven files are needed for primary file and button assignments. **Important!** If less then eleven files are used, buttons, starting with upper left hand corner moving downward, will not work. Files are assigned in numerical order, from bottom right to upper left, 1.mpg, is the primary file, which repeats until a button is pressed on interactive unit. Once MPEG associated with pressed button has finished playing, 1.mpg will resume and repeat until another button is pressed. Files 2.mpg thru 11.mpg are assigned to a specific button. (See Below).

File Button Assignments - This assumes eleven MPEG files are used, with 1.mpg as primary file

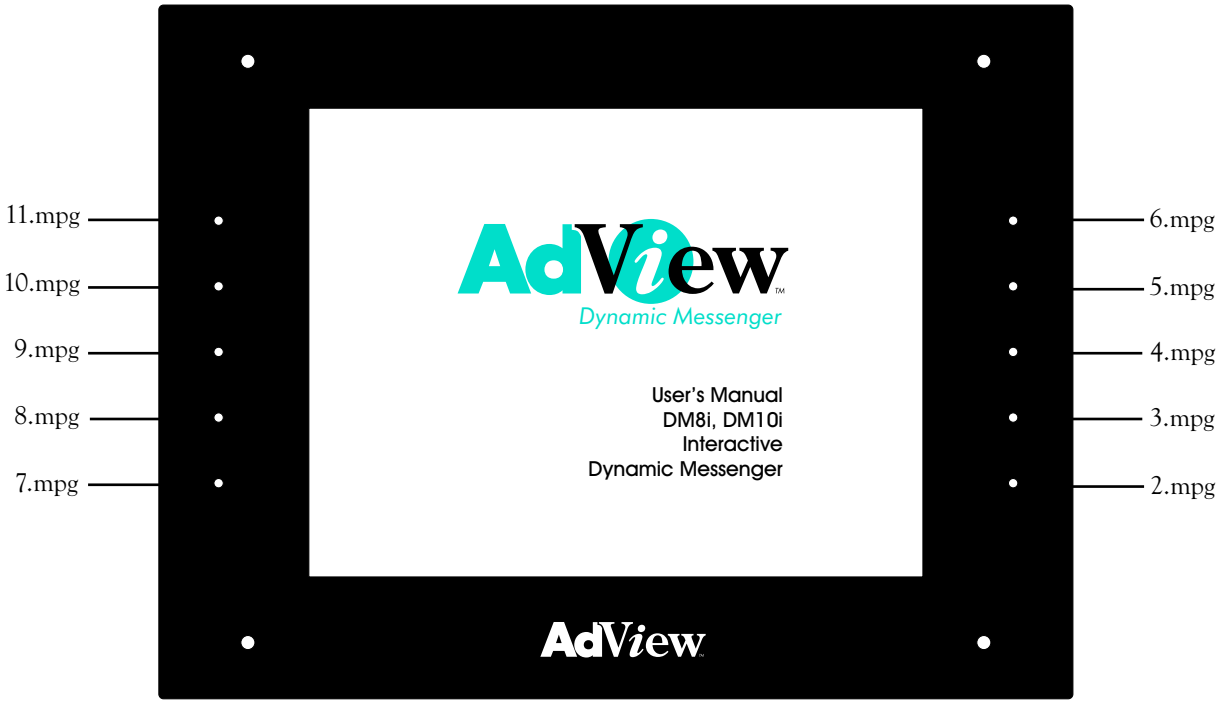

5. Interactive Player System

5.1 Memory Cards

DM8/10i supports Compact Flash cards.

5.2 File Formats Supported

Video: MPEG 1 (VCD, DAT format), MPEG 2 (SVCD, DVD), MPEG4, DivX 3.11/4.x/5.x, XviD
Video File Formats: MPG, AVI, MP4, DAT, VOB

5.3 Compact Flash Setup

After copying desired files, carefully insert CF card into CF port, it will only fit one way.
Never force card, as damage to pins in CF port can result.

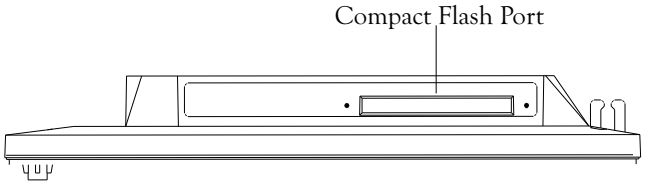

6. MENU Setup

Press **MENU** button until desired option is highlighted.

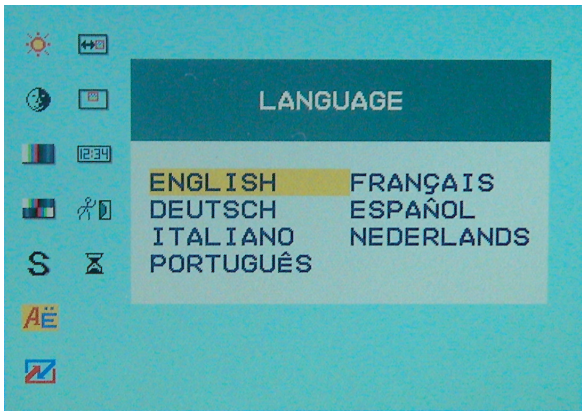

General Menu:

- VIDEO ADJUST
- MENU ADJUST
- EXIT

6.1 VIDEO ADJUST

BRIGHTNESS - To adjust press VOL- to decrease and VOL+ to increase

CONTRAST - To adjust press VOL- to decrease and VOL+ to increase

SATURATION - To adjust press VOL- to decrease and VOL+ to increase

TINT - To adjust press VOL- to decrease and VOL+ to increase

SHARP - To adjust press VOL- to decrease and VOL+ to increase

6.2 MENU ADJUST

LANGUAGE - Press VOL- or VOL+ until desired language is highlighted

RESET - Press VOL- or VOL+ to highlight YES to reset player to factory settings

HORIZONTAL - Press VOL+ to move menu to right. Press VOL- to move menu to left

VERTICAL - Press VOL+ to move menu up. Press VOL- to move menu down

DURATION - Press VOL+ to increase and VOL- to decrease time menu stays on screen

6.3 EXIT

EXIT - To exit MENU setup press VOL+

TV-SEARCH - Not functional

7. Specifications

DM8i

Dimensions:	9.00"h x 12.00"w
Panel:	8-inch Active Matrix TFT LCD
Viewing Area (mm):	161 (H) × 121 (V)
Lamp Life:	40,000 Hours
Viewing Angel:	Vertical 90° / Horizontal 120°
Resolution:	800 x 600
Power:	DC 12V
Operating Current:	1.6A
Power Consumption:	19.2W

DM10i

Dimensions:	9.00"h x 12.00"w
Panel:	10-inch Active Matrix TFT LCD
Viewing Area (mm):	215 (H) × 162 (V)
Lamp Life:	40,000 Hours
Viewing Angel:	Vertical 110° / Horizontal 140°
Resolution:	800 x 600
Power:	DC 12V
Operating Current:	1.6A
Power Consumption:	19.2W